


INSTALLATION

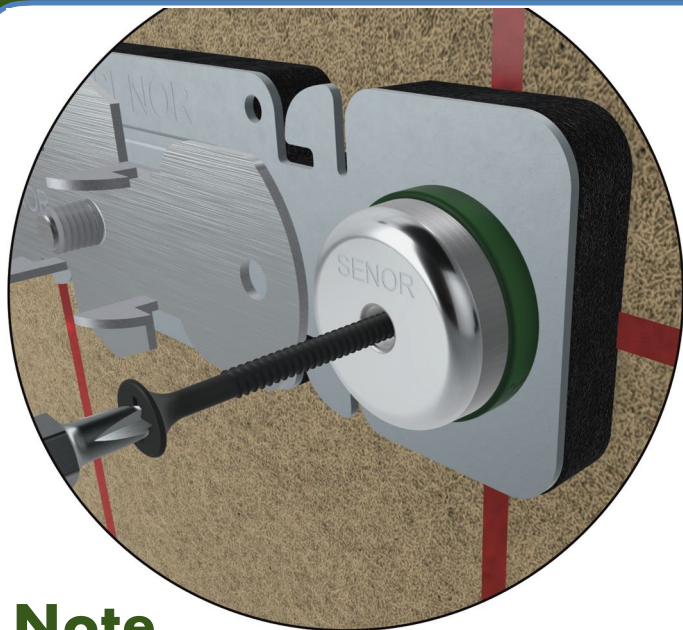



1. We attach the FTD NIVEL-60/TD to the wall using steel screws and Fischer plugs.

2. We level it to the desired height and insert the TC-60/27 profile onto the FTD NIVEL-60/TD with slight pressure on the anchors (CLIP STOP).

IMPORTANT: The ends of the profile must rest on the acoustic seal EPDM CR-130 type BEC acoustic weatherstrips.

Note

SENOR
FTD NIVEL-60/TD. Ideal for addressing wall systems with limited space and alignment issues.

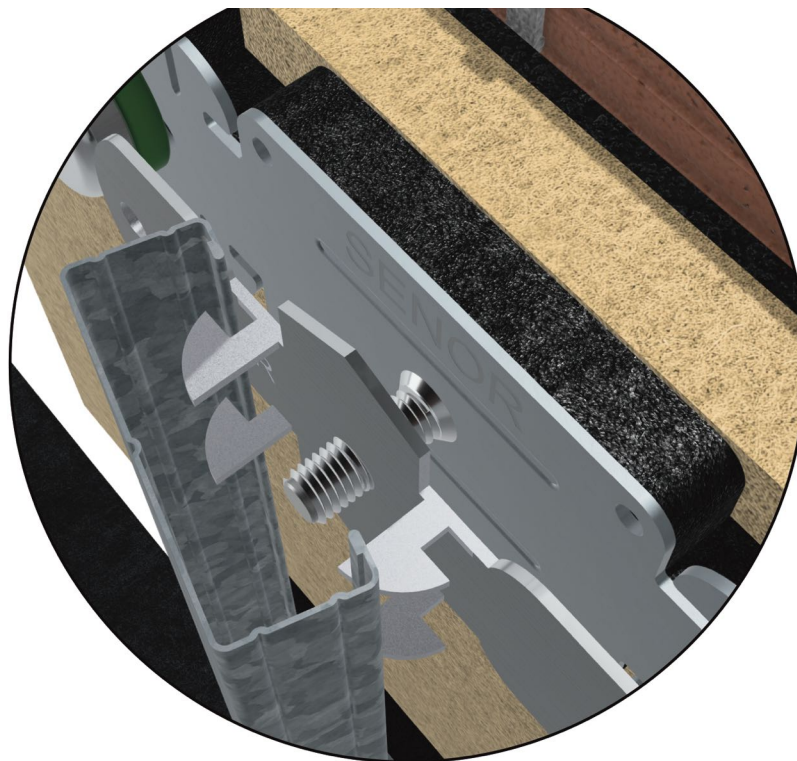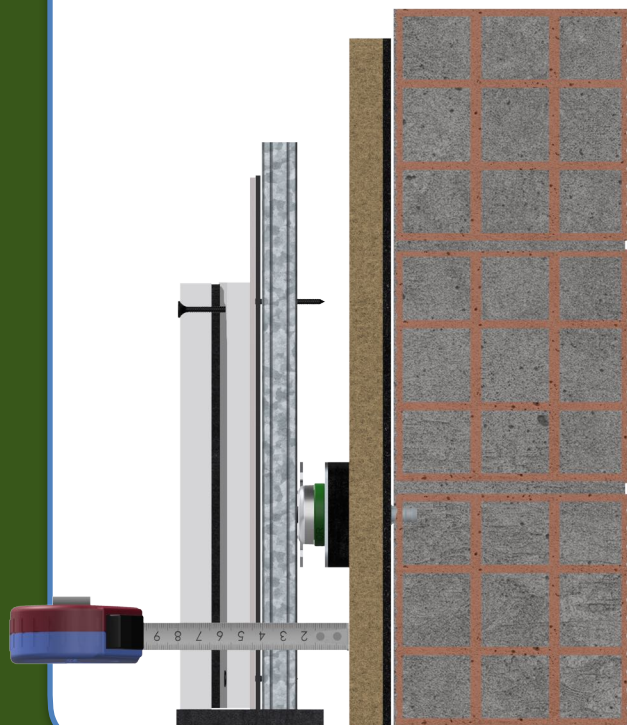

3. Ready to apply the desired ACOUSTIC PANEL SANDWICH.