


Ref. TBF (Anti-Tilt)

A WORLD of ACOUSTIC solutions

www.SENOR.es



SENOR 

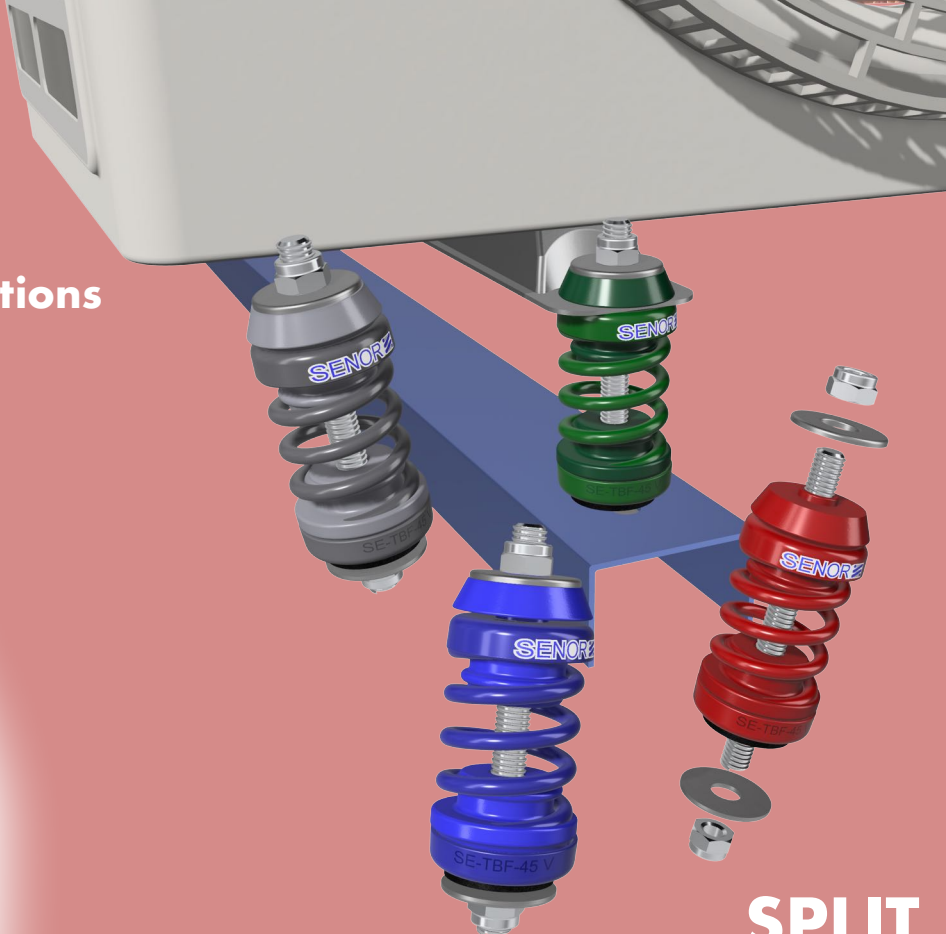

SPLIT

Domestic
Machines



SPLIT


Domestic Machines



Ref. TBF (Anti-Tilt)

Installation method:


Anti-Tilt Damper for Supporting HVAC Units on Brackets

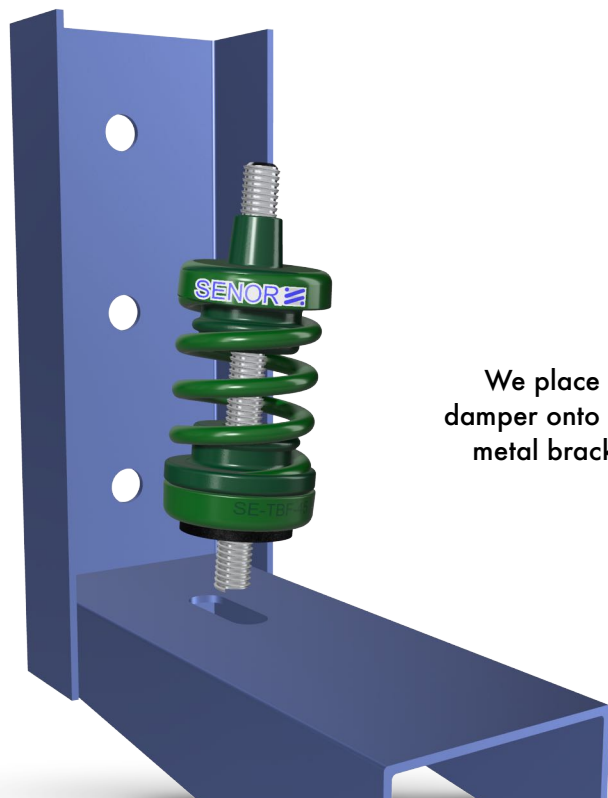


1:
We place the damper onto the metal bracket.



2:
We tighten it from the bottom using the washer and the self-locking nut.

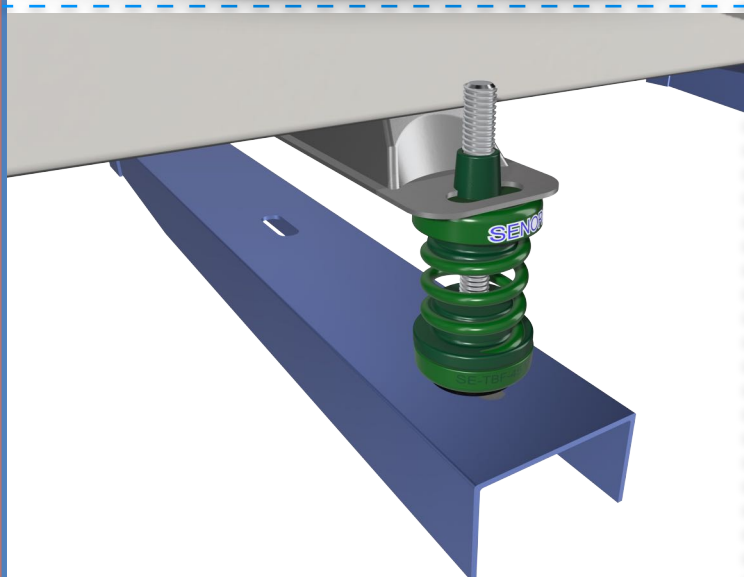

3:
We support the equipment onto the damper

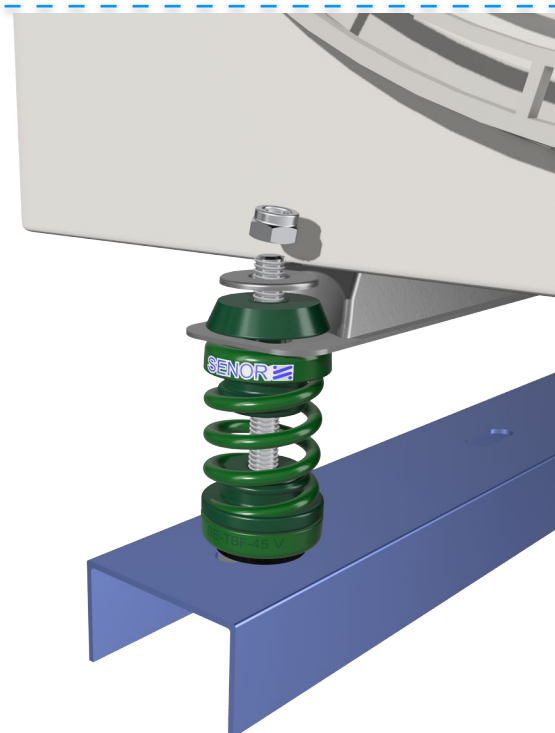

4:
We place the rubber washer, the metal washer, and the self-locking nut **ON THE LEG OF THE UNIT** and tighten them for its fixation.